




ES PROMOTIONS RISK ASSESSMENT & METHOD STATEMENT



Risk Assessment of: **Gladiator Joust**

 Risk	 Existing Controls	Likelihood 1 - 5	Severity 1 – 5	Risk Score L x S	 Further Action to Take
Electrocution	Electrical units are visually inspected for obvious faults. All equipment is PAT tested once a year, cables are covered and only trained and insured staff should have access.	1	3	3	If sockets are used at the venue, we ask the client to check these prior to event.
Over Enthusiastic Participants	Responsible person supervising at all times	2	1	2	With prior notice of large numbers attending the event additional trained operators will be supplied.
Jumping Over the Unit	Responsible person supervising at all times	1	1	1	With prior notice of large numbers attending the event additional trained operators will be supplied.
Danger of unnecessary Injury	Ensure that no one uses the equipment who suffers from neck or back problems, heart complaints, is feeling unwell, suffering effects of alcohol or drugs or pregnant.	1	5	5	None
Overloading or tipping over	Only 2 players must be on this inflatable at any one time.	1	5	5	The ES Promotions operator reserves the right to refuse service to anyone they deem as a safety threat.
Adverse weather conditions	The equipment will be switched off in heavy rain and id not permitted to run in strong winds as either of these can be deemed as unsafe weather.	Dependant on weather	Dependant on weather	Dependant on weather	None
Tripping over Anchorage Points, spare equipment, electrical cables	Anchor points used as per manufacturer's instructions and all spare equipment placed safely or stowed away.	1	1	1	In the event of large numbers of participants attending or large events, additional safety fencing can be erected.
Injury through lack of supervision	A fully trained operator must be present with the equipment at all times, in the event that the operator is not in view – do not enter the equipment under any circumstances. If equipment is booked without ES Staff we recommend a responsible adult supervises the activity.	1	5	5	None

ES PROMOTIONS RISK ASSESSMENT & METHOD STATEMENT

Petrol blower & Generator –fire risk	Blowers & Generators filled with fuel before delivery.	1	3	3	Spare fuel stored in a suitable marked container in a safe location. Units switched off during refuelling.
Choking	No food drinks or chewing gum to be allowed on or near the inflatable.	1	4	4	None
Injury through 3 rd party items	All shoes, glasses, jewellery, badges etc MUST be removed before using the inflatable	1	5	5	None
Danger of Fire	No Smoking or Barbeques near the inflatable	1	5	5	None
Emergency	In the event that someone is seriously injured, DO NOT remove the individual, leave the inflatable switched on- DO NOT DEFLATE and dial 999 immediately.	N/A	N/A	N/A	N/A
Injury through 3 rd Party & Spectators	Always ensure the area surrounding the inflatable is not overcrowded	1	2	2	With prior notice of large numbers attending the event additional trained operators will be supplied.
Injury through lack of inflatable pressure or suffocation	Do not allow anyone to be on the inflatable during inflation or deflation as this can be EXTREMELY DANGEROUS	1	2	2	None
Injury from Pugel Sticks	Operator to ensure participants always wear a head guard and regularly check pugel sticks to ensure they haven't been damaged and become dangerous.	1	2	2	With prior notice of large numbers attending the event additional trained operators will be supplied.
Participant falling from podium during activity.	A supervisor will be provided at all times to ensure the correct starting positions are observed, If the rider is not complying with the operators instructions the rider will be removed. Whilst all steps are taken to avoid unnecessary falling from the podium, it is almost unavoidable and is the nature of the ride itself so must be accepted.	1	2	2	Regular checks on the inflation of the safety bed.
Injury through bouncing out of the inflatable ring	Ensure that an area of 6 feet (2mtrs) around the unit is completely clear and ensure the area in which the ring is inflated is completely swept of debris.	1	3	3	None

L=Likelihood S=Severity L X S = Risk Score with 1 = Lowest Risk and 25 = Highest

Risk and likelihood are worked out using numbers 1-5. These are then multiplied to give the risk score. ES Promotions recommend that clients undertake their own risk assessment to suit individual needs.

We strive to have no risk score over 10 and anything over 20 would result in ES Promotions not running the kit

ES-Promotions, Unit 24 Larkwood Close, Kettering, Northants. NN16 9NQ
Telephone: 01536 310 520 Fax: 01536 358 113 email: sales@es-promotions.com
www.es-promotions.com

ES PROMOTIONS RISK ASSESSMENT & METHOD STATEMENT

METHOD STATEMENT FOR GLADIATOR JOUST

All measurements in 'ft'.

UNIT SIZE (W x D x H)	16 X 16 X 10	TBC
MIN. AREA REQ.	20 X 20 X 10	
POWER REQUIRED	1 x 13amp	
OPERATORS	1	
ZIPS	1	
TIE POINTS	8	

1) Arrival on site

- > Find a safe and practical entrance point to unload kit
- > Confirm location is suitable for equipment
- > Confirm where power is available from
- > Ensure ground is flat and free from obstructions and sharp objects

2) The Set Up

- > Unroll inflatable, and place into position - you'll see 2 holes in the middle of the inflatable
- > Place metal bases underneath inflatable, leaving the short upright sections poking out the top of the holes
- > Insert the 2 metal uprights into the bases, followed by the soft podiums
- > Ensure blower hole is at the furthest point away from guests
- > Attach blower to blower hole, using the red strap
- > Check inflatable for any zips / openings, and ensure they are securely closed
- > Plug in extension lead to the nearest 13amp power point, or generator*
- > Use duct tape to tape down loose cabling across paths, or tape cable to perimeter of area if working indoors
- > Plug blower into extension lead and allow to fully inflate
- > If in position, secure with stakes if on grass, or with sandbags if on concrete or indoors
- > If not in position, turn off power, remove blower, drag into position before re-connecting blower and power
- > Place 2 mats in front of the entrance, and place both joust poles and head guards on the inflatable

* *If using petrol blowers or generators, ensure the area is well ventilated, and is barriered off*

ES-Promotions, Unit 24 Larkwood Close, Kettering, Northants. NN16 9NQ
Telephone: 01536 310 520 Fax: 01536 358 113 email: sales@es-promotions.com
www.es-promotions.com

ES PROMOTIONS RISK ASSESSMENT & METHOD STATEMENT

appropriately

using the plastic fencing and metal stakes provided. Do not overfill with petrol; do not smoke near generators, and ensure fuel cap is securely tightened before use

3) The Operation

- > Do not leave the inflatable unattended at any point during the operating hours
- > If you must leave, evacuate everyone off the inflatable, and turn power off
- > This unit is designed for 2 people. Let each game run for 'best of 3 knockdowns' or similar
- > If you are witness to any behaviour that is deemed dangerous, you must tell that person to leave the inflatable
- > In the event of rain or snow, ensure extension leads and power points are suitably sheltered
- > The unit may be used in bad weather, but will be to the discretion of the event manager
- > Ensure all shoes, glasses, and excessive jewellery are removed before use

4) The Pack Down

- > Ensure the area is clear of guests before commencing the pack down
- > Remove mats, head guards and joust poles
- > Turn off the power, remove the blower, wind up the extension lead and remove stakes / sandbags
- > Remove the soft podiums and the metal uprights and bases
- > Walk the inflatable to remove excess air
- > Fold one half of inflatable over completely, always ensuring the blower hole is left sticking out
- > Fold over inflatable half once more
- > Walk the inflatable if necessary, then begin rolling toward the blower hole
- > Place metal end of strap under inflatable, and roll onto it, pull strap over and secure
- > Load van in a safe and secure manner, before checking area for equipment